



Floor Warming Thermostat

DS-606.0-0811



1. PRODUCT NAME

LATICRETE® Floor Warming Thermostat

2. MANUFACTURER

LATICRETE International, Inc.
1 LATICRETE Park North
Bethany, CT 06524-3423, USA

Telephone: +1.203.393.0010, ext. 235
Toll Free: 1.800.243.4788, ext. 235
Fax: +1.203.393.1684
Internet: www.laticrete.com

3. PRODUCT DESCRIPTION

LATICRETE Floor Warming Thermostat is a simple to use digital programmable thermostat designed to be used with LATICRETE floor warming mats. Thermostats are available with a 5 mA built-in GFCI and 120 V or 240 V configurations.

All electrical connections must be made by a licensed electrician. Failure to do so will void all warranties and claims. Comply with all applicable building and electrical codes.

Features

- Advanced floor control maximizes comfort and energy savings
- 15 A (res.), 50/60 Hz
- 4 wires/DPST with full double-pole disconnect
- 15 ft. sensor (4.5 m) included
- Easily accessible floor sensor connector
- Built-in GFCI with test light
- 7-day programmable
- Epoxy soundproofed
- On/Standby switch

Parts

- Floor sensor probe
- One (1) power base
- Two (2) screws
- Four (4) solderless connectors for copper wires

4. TECHNICAL DATA

Model	Supply	Max. Load	Power	Wiring	GFCI
120 V, 5 mA GFCI	120 VAC, 50/60Hz	15 A	1800 W	4w/DP	5 mA
240 V, 5 mA GFCI	240 VAC, 50/60Hz 280 VAC, 50/60Hz	15 A	3600 W 3120 W	4w/DP	5 mA

Storage: -4°F to 120°F (-20°C to 50°C)

Size (H x W x D) 4.89 x 2.76 x 0.91 in. (124 x 70 x 23 mm)

5. INSTALLATION

Guidelines

Turn off power to the heating system at the main electrical panel to avoid electrical shock. The installation should be carried out by an electrician.

- High voltage thermostats must be installed onto an electrical box.
- For a new installation, choose a location about 5 ft. above the floor and on an inside wall.

Procedure

For complete installation instructions, refer to LATICRETE Floor Warming Install Manual DS 608.9

1. Connect the power base wires to the power supply and load using solderless connectors for copper wires.
2. Insert the floor sensor wires through one of the two holes below the terminals and connect the wires to terminals 3 and 4 (no polarity).
3. If you wish to use a remote controller insert the cable (use 18 to 22 gauge flexible wires) into one of the two holes available below the terminal board and connect to terminals 2 and 3 of the base.
4. Push the excess length of the high-voltage wires back into the electrical box.
5. Secure the power base to the electrical box using the provided screws.
6. If necessary, set the configuration switches on the control module (refer to control module user guide, DS 606.5)
7. Install the control module onto the base.
8. Apply power to the heating system.

6. AVAILABILITY AND COST

Availability

LATICRETE® Floor Warming products are available in North America.

For distributor information:

Toll Free: 1.800.235.4788
Telephone: +1.203.393.0010
Internet: www.laticrete.com

Cost

Contact a LATICRETE Distributor in your area.

7. WARRANTY

See 10. FILING SYSTEM

DS 230.13: LATICRETE® Product Warranty

8. MAINTENANCE

The Internal LATICRETE Floor Warming Thermostat GFCI (Ground Fault Circuit Interrupt) should be tested monthly to ensure continued safe operation. If an external GFCI is utilized, it should also be tested monthly.

9. TECHNICAL SERVICES

Technical assistance

Information is available by calling:

Toll Free: 1.800.243.4788, ext. 235

Telephone: +1.203.393.0010, ext. 235

Fax: +1.203.393.1948

To acquire technical and safety literature, please visit our website at www.laticrete.com.

10. FILING SYSTEM

DS 230.13: LATICRETE Product Warranty

DS 605.0: LATICRETE Floor Warming Mat

DS 608.9: LATICRETE Floor Warming Install Manual

DS 606.3: Control Module User Guide

LATICRETE International, Inc.
One LATICRETE Park North, Bethany, CT 06524-3423 USA • 1.800.243.4788 • +1.203.393.0010 • www.laticrete.com

©2011 LATICRETE International, Inc.
All trademarks shown are the intellectual properties of their respective owners.

DS-606.0-0811